

ZOMBIEPHONE FX


BUNKER ANALOG · PRECISION STREAMING

DOC	USER MANUAL
REV	1.0 · 2026
TYPE	BKR-3

WIRELESS TIMECODE RECEIVER · TYPE BKR-3

BKR REMOTE TIMECODE

An Android companion display for the studio — dubbing, voice-over, soundtracking, and general production. Turns a spare phone or tablet into a dedicated, full-screen timecode readout fed directly from **BKR MasterStreamer** over your own Wi-Fi network. No cables, no extra hardware.

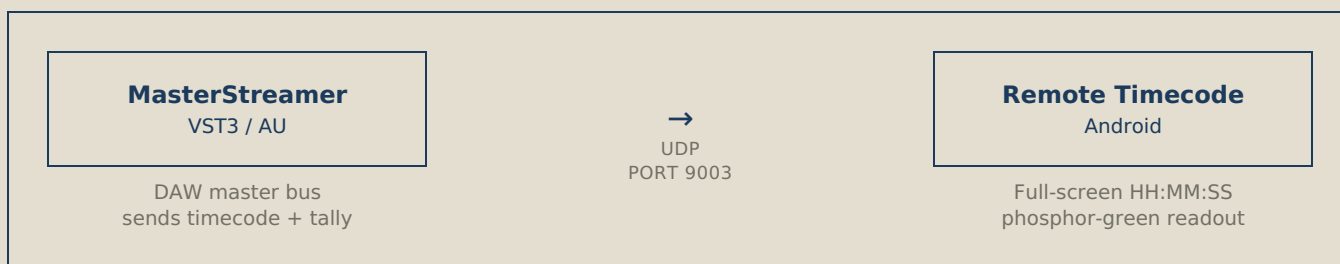

RECEIVES

BKR MasterStreamer · Timecode & Tally stream (VST3/AU)

DISPLAY

Full-screen HH:MM:SS · phosphor-green 7-segment readout

LINK

UDP / Wi-Fi · port 9003 (default, editable)

PLATFORM

Android 8+

01 Setup

- 1 Same Wi-Fi.** Put the phone and the computer on the same router — Ethernet or Wi-Fi on either side is fine, as long as it's the same network.
- 2 Open the app, note its IP.** Tap the gear icon (bottom-right) — the Settings sheet shows this phone's current IP under LOCAL IP.
- 3 Point MasterStreamer at it.** In the plugin's Timecode & Tally panel, type that IP, leave the port at 9003, and check **ACTIVATE UDP TIMECODE STREAM**.
- 4 Press play.** The readout switches from 00:00:00 to the DAW's live position.

CONNECTED WHEN

The big readout starts moving the moment you hit play. In Settings, STATUS reads **LISTENING** and PACKET RATE shows a non-zero value.

REQUIRES BKR MASTERSTREAMER

This app only displays — it needs the BKR MasterStreamer VST3/AU plugin on the DAW's master bus to send it anything. See the MasterStreamer manual for that side.

02 Settings & Troubleshooting

SETTINGS SHEET (GEAR ICON)

STATUS	Stopped / Listening / No signal
LOCAL IP	This device's current address
PACKET RATE	Incoming packets per second
UDP PORT	9003 default · range 1024-65535

Changing the port here only changes what this app listens on — update the same number in MasterStreamer's Timecode & Tally panel, or the stream stops arriving.

TIP

Reserve a static IP for the phone in your router's settings (DHCP reservation), so you don't need to re-enter it in MasterStreamer every session.

PRIVACY

Everything stays on your local network. No cloud, no account, no server-side recording — the app only listens for UDP packets on your Wi-Fi.

TROUBLESHOOTING

SYMPTOM	CHECK
Stuck at 00:00:00	Is ACTIVATE UDP TIMECODE STREAM checked in MasterStreamer, and is the DAW playing?
Worked, then stopped	Router likely reassigned this phone's IP. Re-check LOCAL IP and re-enter it in MasterStreamer.
Never worked	Router's "client/AP isolation" may be blocking devices from seeing each other — turn it off.
Works at home, not elsewhere	Studio network may block UDP between devices. Ask IT to open port 9003.
Jittery readout	Weak Wi-Fi or older chipset power-saving. Move closer to the router, or disable battery optimization for the app.

FASTEST TEST

Start playback with the Timecode stream activated in MasterStreamer and watch PACKET RATE in Settings. A rising number confirms packets are arriving.

SUPPORT

bunkeranalog@gmail.com

WEB

bunkeranalog.com/zombiephonefx